

THANK YOU FOR YOUR PURCHASE
PLEASE READ THESE INSTRUCTIONS CAREFULLY PRIOR TO USE

SPECIFICATIONS

Default Function: 1 hour at 100%, 2 hours at 80%, 2 hours at 50%, 9 hours at 30% (dusk to dawn)
Range: 1.5m range –
Modes: Brightness + / - (10%), Timer 4hr, 6hr, 8hr, 10hr, Dusk to Dawn, Override On / Off
Battery: CR2025 (1 pc) – Included (replaceable)
Compatibility: Lumena Pro-Solar – Signa / Eccentrica models
Guarantee: Covered under luminaire guarantee



Producer Registration Numbers: WEE/KC3440XY / BPRN0843

! WARNINGS !

- If damaged, cease use immediately.
- If battery leaks – do not use
- Contains batteries – keep out of reach of children – DO NOT SWALLOW
- Do not throw batteries in household waste – recycle responsibly
- This product is not waterproof – store inside.

RETURNS / RECYCLING:

If purchased from a 3rd party, please contact your supplier. If purchased direct, contact us by phone or email:
 Lumena Lights Ltd, Centre 33 Long March, Daventry, NN11 4NR, U.K. Tel: +44 1327 871161 Email: sales@lumenalights.com
Our full returns policy is available on our website.


Waste Electrical Products and Batteries must not be disposed of with household waste. Please check with your local authority or contact us for more information. Please recycle packaging whenever possible.



FUNCTION / USE:

For use with Pro-Solar SIGNA and ECCENTRICA models – Lumena Lights Ltd.

1. Turn on the master on/off switch on the luminaire
2. Remove battery tab protector before first use.
3. Use the remote control to adjust brightness, override and function. See image ▶
4. Point the remote towards the receiver on the LED panel within 1.5m range and press the relevant button firmly.
5. Light will flash to confirm function adjustment.

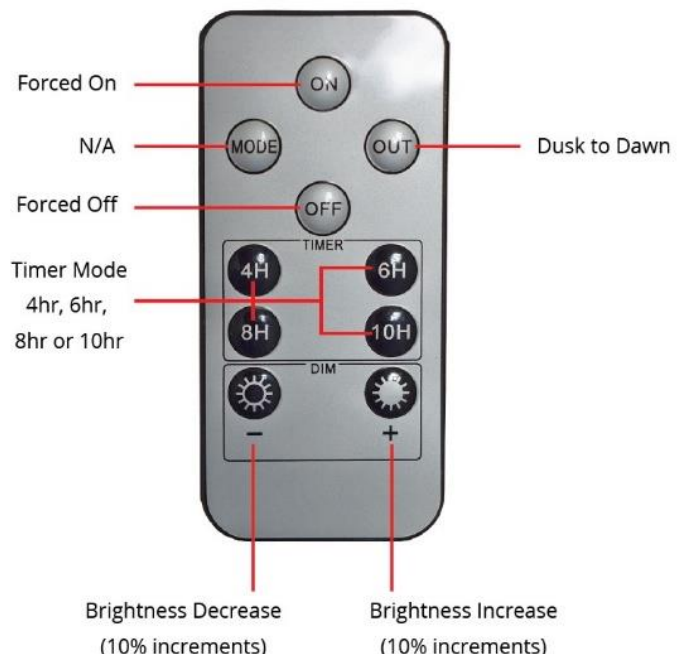

STORAGE:

Remote control must be stored inside, away from direct heat. If stored for long periods of time, it is recommended that the battery is removed and stored separately.

Full product range & more information: www.lumenalights.com