

LUXROX Rock Light 12v

INSTRUCTIONS



WARNINGS

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE COMMENCING ANY WORK



- This is a Class 3 product (Low Voltage) – no earth required.
- **12V TRANSFORMER MAY BE REQUIRED – sold separately**
- This unit must be fitted by a competent person – if in doubt consult a qualified electrician.
- Install in accordance with IEE wiring regulations and current Building Regulations.
- To prevent electrocution, switch off mains supply before installing or maintaining this fitting. Ensure other persons cannot restore the electrical supply without your knowledge.
- This light fitting should be connected to a circuit with a 30Ma RCD fitted.
- If replacing an existing fitting, make a careful note of the connections.
- When changing the bulb(s), always switch off at the mains & allow the bulb to cool before handling – **LAMP WILL GET HOT WHEN IN USE.**
- All connections should be made as watertight as possible to avoid electrical shortage.
- Always use the correct type & wattage of bulb. Never exceed the wattage stated.
- The unit may get warm whilst on for a period of time.



Materials: Fibre Glass
Voltage: 12v – Low Voltage
Max. Wattage: 20W / Bulb Holder
Lamp Fitting: G4
Recommended Lamp: LED
IP Rating: IP44
Product Size: Various
Cable: H05RN-F Versa Plug & Play (may vary)



**2 YEAR
GUARANTEE**

see website for
more details

INSTALLATION:

- A length of 12v 2 core rubber cable is supplied with a VERSA 2 pin male plug (H05RN-F – may vary).
- Push the plug firmly into the female adaptor of the Transformer or splitter.
- Screw the attached threaded cap to the female adaptor to create a secure connection.
- If a splitter is used, ensure a waterproof cap is used to cover any unused terminals.
- Attach the transformer to the splitter (sold separately) using the same method as above and plug the transformer into the outdoor waterproof mains socket.
- Install Bulb(s) as per below.
- Mount the Rock Light in desired location with ground spike provided (see overleaf).

NOTES:

- Ensure all cabling is positioned carefully around the edges of the garden, in conduit or similar, or hooked up on fences etc. to avoid damage after installation.
- Ensure the transformer has plenty of air circulation to avoid overheating.

Male 2 Pin Plug & Play Adaptor (supplied)

Female 2 Pin Plug & Play Adaptor



BULB INSTALLATION:

- Turn off the power supply.
- Remove the base by unscrewing the 4 x screws.
- Push the G4 bulb(s) firmly into the bulb holder(s) – do not exceed maximum wattage
- Replace the base and secure with the 4 x screws. Do not overtighten or this could damage the outer shell. If there is damage around the predrilled holes, simply drill new holes in a slightly different location to ensure the base is fitted securely.

Full Versa Plug & Play Range & More Information:

GROUND SPIKE INSTALLATION:

IMPORTANT

It is extremely important not to force the ground spike into harder ground as this can result in broken or damaged lights and will invalidate the warranty. Please follow the guidelines below

A four-fin anchor spike has been included for securing the LUXROX into soft ground, measuring 150mm in length and 30mm in diameter.

Mounting into Earth: Soak the area with water until the spike locations becomes wet mud, to a depth of 170mm. Attach the spike to the threaded socket provided on the LUXROX base and gently push into the wet mud. If there is resistance, add a little more water to soften the earth. Once dry, the ground spike will be secure.



Mounting into Grass: Remove a small area of turf. Follow the “Mounting into Earth” instructions above.

Mounting into Gravel or Stones: Dig a hole 100mm in diameter and 170mm deep. Fill with wet sand. Attach the spike to the threaded socket provided on the LUXROX base and gently push into the wet sand. Push down on the top layer of sand to ensure it is tightly surrounding the spike. Once the sand is dry, the light will be secure.

CLEANING:

Occasional cleaning and care is recommended for this product to avoid a build-up of grime common in an outdoor environment. Simply wipe clean with a damp, soft cloth to remove excess dirt. Do not scrub the exterior or use abrasive cleaners as this could damage the finish. Please visit our website for more information on cleaning different materials.

FOUR DIFFERENT SIZES:

LUXROX 1

260 X 240 X 230mm (h)



LUXROX 2

370 X 260 X 280mm (h)



LUXROX 3

505 X 360 X 287mm (h)



LUXROX 4

460 X 435 X 290mm (h)



THREE DIFFERENT FINISHES:

WHITE GRANITE



SANDSTONE



SLATE GREY



RETURNS:

Returns will only be accepted with our prior agreement when a returns number will be issued. Please contact us prior to returning goods, and include the relevant documents. Please see our website for more information.

RETURNS, Lumena Lights Ltd, Centre 33 Long March, Daventry, Northants, NN11 4NR

Tel: +44 1327 871161

Fax: 0800 066 4410

Email: sales@lumenalights.com

Producer Registration Number:
WEE/KC3440XY

www.lumenalights.com